



INSTRUCTION MANUAL
**RESOLVING REMOTE
COMMUNICATION ISSUES**
SOLAREGE INVERTERS

Reading an Inverter


with no LCD Screen

All Inverter Types


1 Download the SolarEdge Inverter SetApp from the [App Store](#) or [Google Play Store](#).




2 Once the app is downloaded, open and press "view Only" at the bottom of your screen. No login is required.

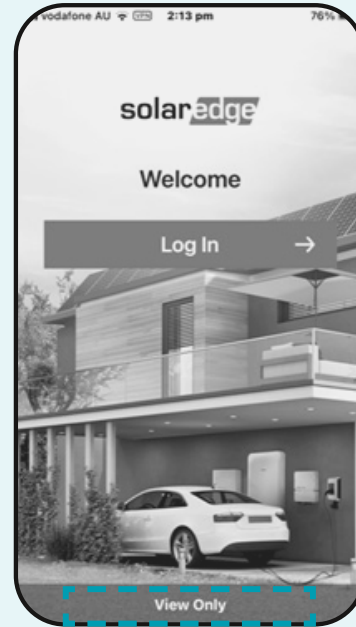

3 You will be taken to a screen, which will open your camera. Hover your phone over the top QR code on the right hand side of the inverter - ensure the full code is visible on your screen.

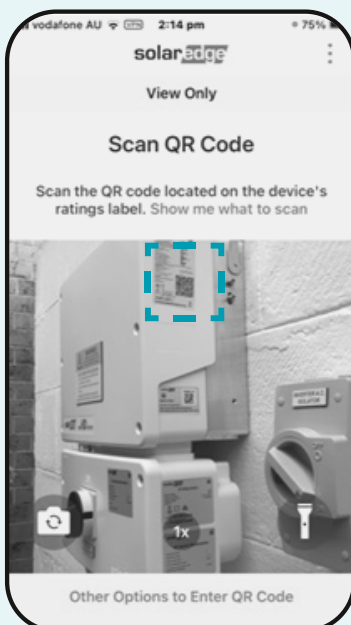

4 The app will then prompt you to flick the toggle switch to "P". You will then be asked to "Join this network". Confirm and join the network.

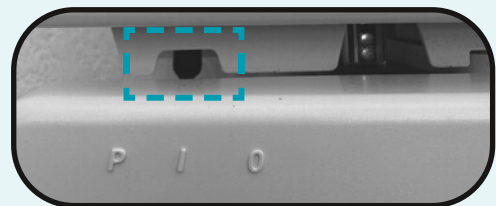

5 Once connected you will see a status page with the site's live energy production shown.

