





HOW TO

REBOOT YOUR SOLAREGE INVERTER & LG BATTERY

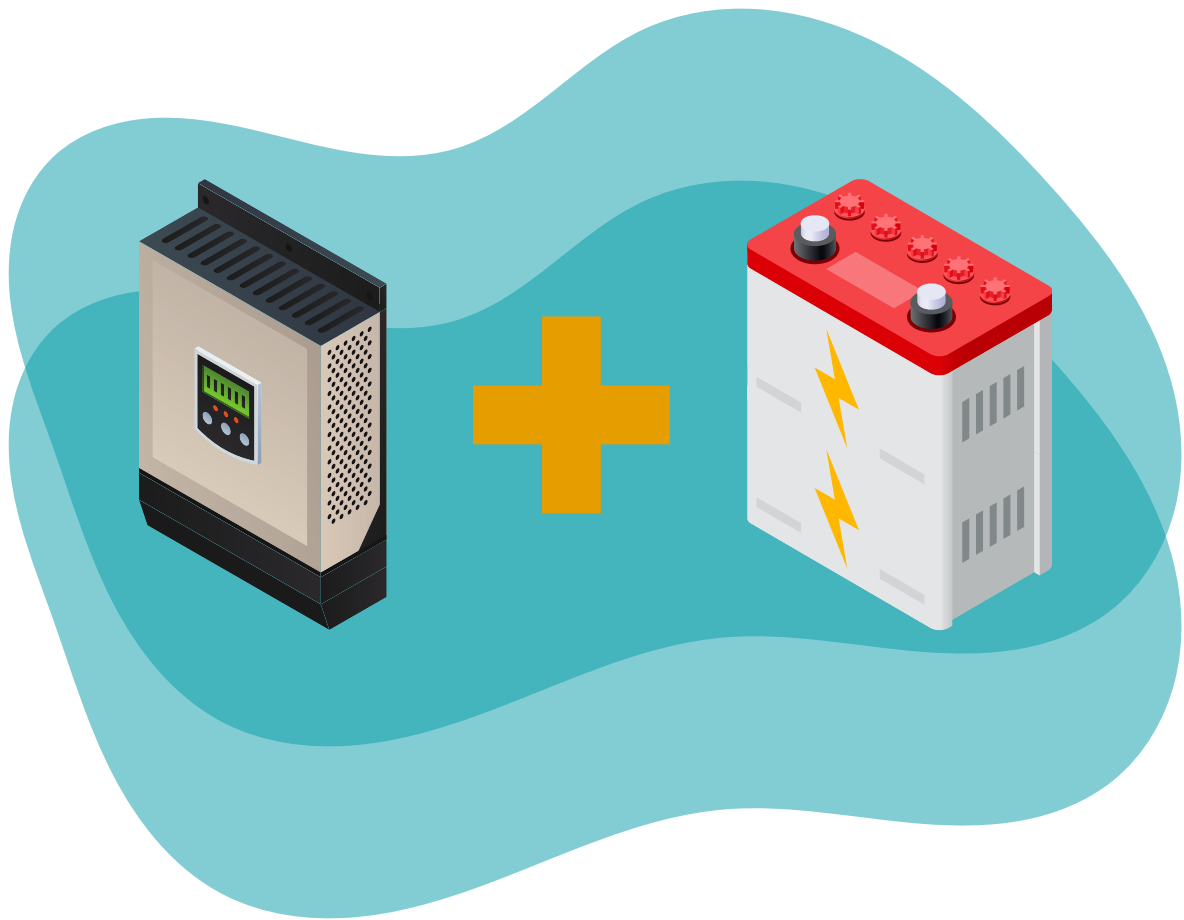


Inspiring sustainable change.

Power off your inverter

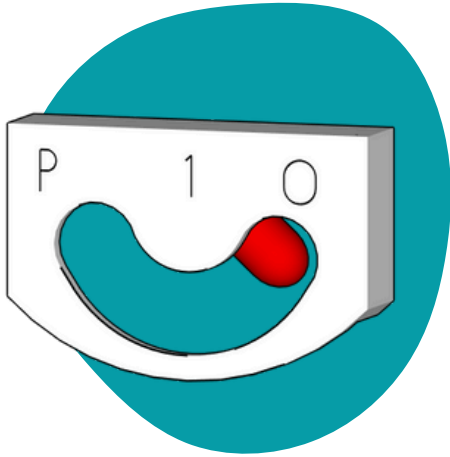


- 1** Find the inverter's power toggle switch at the bottom of the inverter module. Turn the switch to the OFF (0) position. Wait 60 seconds.

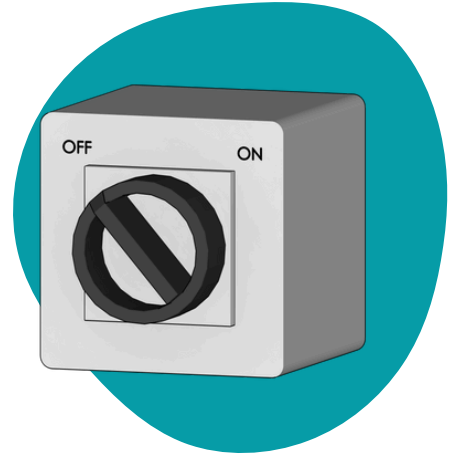


- 2** Turn the adjacent isolator switch OFF. Depending on the model, this will either be on - or next to - your inverter.

Power off your battery

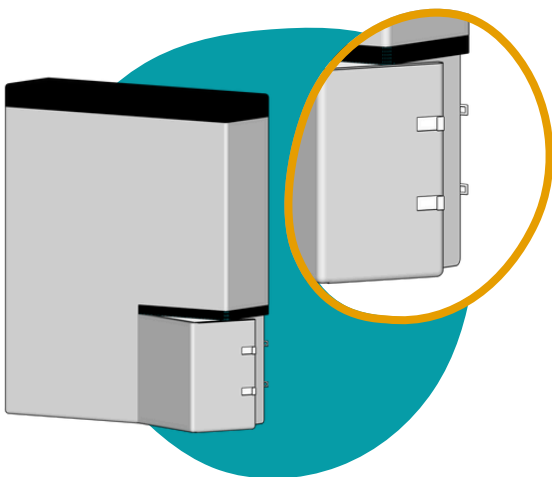

- 3** Remove the wiring box cover from the battery by unclipping the clasps at the rear.

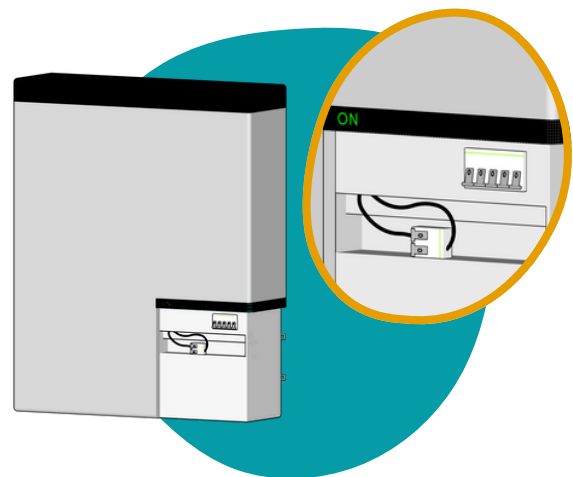

- 4** Turn the circuit breaker and auxiliary power disconnect switch to their OFF (0) positions. Wait 5 minutes.

To power back on, repeat steps 1 - 4 in reverse order.